

FROM	BL-22-00028	ANGLE	DIST	NORTH	EAST	TO
=====						
	PT/PT	INVERSE	(12A)			
*****	START			94128.92151	95784.13815	390
390	INV	S 85 24 49	E	1251.69	94028.83136	607
607	INV	S 4 29 12	W	131.79	93897.44979	1521
1521	INV	S 31 03 55	E	182.80	93740.86467	1523
1523	INV	S 11 52 23	E	117.34	93826.03088	1525
1525	INV	S 44 42 56	E	70.77	93575.74211	1527
1527	INV	S 79 17 10	E	100.31	93557.09399	1529
1529	INV	S 47 58 09	E	286.09	93365.54749	1531
1531	INV	S 32 04 49	E	138.12	93248.52162	1533
1533	INV	S 47 25 03	E	89.24	93188.13804	1535
1535	INV	S 31 08 36	E	153.57	93056.70062	622
622	INV	N 89 25 53	W	548.46	93062.14353	349
349	INV	N 1 36 47	E	400.43	93462.41545	347
347	INV	N 85 24 49	W	1302.91	93566.60166	348
348	INV	N 10 00 47	W	571.02	94128.92151	390
=====						

NO CLOSURE ERROR Area = 878289.70 sq ft 94128.92151 95784.13815 390
 20.16276 ac

BL-22-00028

FROM		ANGLE		DIST	NORTH	EAST	TO
=====							
	PT/PT	INVERSE					
*****	START		(13A)		94028.83136	97031.81921	607
607	INV	S	85 21 49	E	166.45	94015.52112	bla
915	INV	S	89 32 05	E	1291.94	94005.03246	915
927	INV	S	1 01 05	W	955.96	93049.22417	E11 CRUSE ALUM C
633	INV	N	89 25 53	W	753.37	93056.70062	927
622	INV	N	31 08 36	W	153.57	93188.13804	E12 CALC
1535	INV	N	47 25 03	W	89.24	93248.52162	633
1533	INV	N	32 04 49	W	138.12	93365.54749	wilson corner
1531	INV	N	47 58 09	W	286.09	93557.09399	622
1529	INV	N	79 17 10	W	100.31	93575.74211	622
1527	INV	N	44 42 56	W	70.77	93626.03089	CALC
1525	INV	N	11 52 23	W	117.34	93740.86467	1535
1523	INV	N	31 03 55	W	182.80	93897.44979	SET P/C
1521	INV	N	4 29 12	E	131.79	94028.83136	1533
							SET P/C
							1531
							SET P/C
							1529
							SET P/C
							1527
							SET P/C
							1525
							SET P/C
							1523
							SET P/C
							1521
							SET P/C
							607
							bla
=====							
					94028.83136	97031.81921	607
NO CLOSURE ERROR			Area = 1111714.45 sq ft		25.52145 ac		